




Наименование **ст**ва **п**топливный насос высокого давления, дизель
Ключ RB 0 413 406 123
Обозначение типа PES6MW100/720RS1131

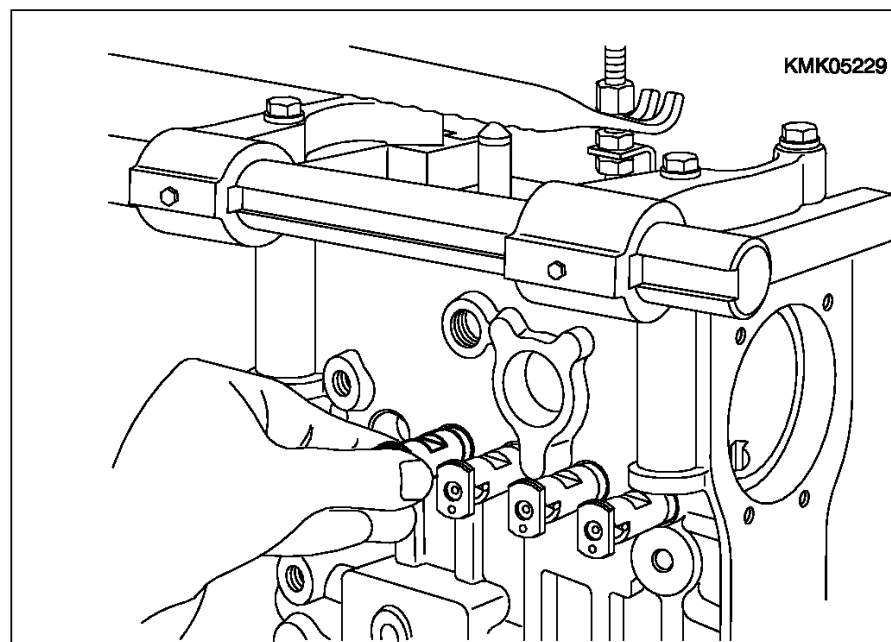


FITTING ROLLER TAPPETS

Attach tubular lever of assembly tool
0 986 611 993 (KDEP 1505) to retaining
pin of assembly device 0 986 612 072
(KDEP 1556).

Position thrust pin on roller of first
roller tappet. Carefully press roller
tappet into tappet hole in housing such
that tappet holder 0 986 612 482 can
be inserted as far as housing stop.

Наименование **ст**ва п **ТОПЛИВНЫЙ НАСОС ВЫСОКОГО ДАВЛЕНИЯ, ДИЗЕЛЬ**
Ключ RB 0 413 406 123
Обозначение типа PES6MW100/720RS1131

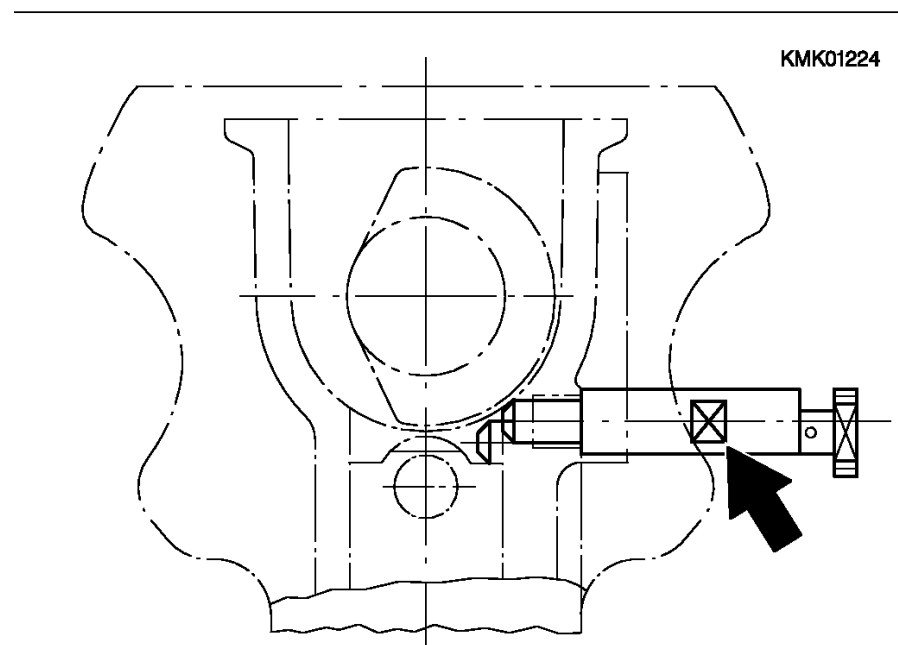

FITTING ROLLER TAPPETS

Milled surface of tappet holder must be horizontal and point towards cam-shaft chamber of pump.

Note:
If roller tappet cannot be inserted far enough, move control rod with

tubular lever detensioned until roller tappet can be completely pressed into its guide hole.

Remove assembly device 0 986 612 072 (KDEP 1556).